




NICMA International Holdings Ltd.
#203-2040 Springfield Road
Kelowna, British Columbia, Canada V1Y 9N7

1-866-647-4353
www.InstaContainerModification.com

Insta Lock Boxes (3233 & 3240) Installation Guide

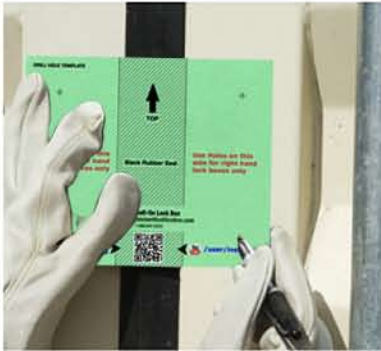

*Products may not be exactly as shown

- 1 Center the Drill Template over the closed container door at your desired height and mark one side. Right side for 3240 and 3233 Left side for 3241.
- 2 Tap your marks with a punch.
- 3 Drill the two pilot holes with a smaller drill bit.
- 4 Drill the two pilot holes with a step drill to desired size for the bolts.
- 5 Bolt on the front section of the lock box to the container door.
- 6 Place the back section of the lock box against the front section and close the container doors. Line up the back section with the front section to ensure that a lock fits in it properly and that the container doors open and close properly.
- 7 Mark the holes of the back section and repeat steps 2-5 to install the back section.

Check out our installation video on YouTube



***Warning** - All products that require installation or fabrication should never be done until you have the product in hand to take exact measurements. While every attempt is made to make sure product specifications are accurate in these pages, there is the possibility the products have been updated or a small variance between production has made the measurement off from what's in this book. Installation of our products may require some fabrication experience, and in no way does warranty cover installation mistakes.